

1 Elevation Poly Combo Corner
(or Elevation Galvanized Combo Corner)



Install Elevation Poly Combo Corner on all outside corners. Elevation Galvanized ComboCorners can also be used.

2 Wall/base Flashing (6"x3.5")



Install metal base flashing along wall. Wrap post or columns with galvanized flashing. Make a 1" cut at the top of the flashing (this cut will help prevent a fish mouth in the top of the corner). Make a straight cut at the base of the flashing. Bend the flashing at a 90° angle.

3 Prime Surfaces




Prime all surfaces and allow it to dry until transfer free to the touch.

4 Elevation S60 36" Field Waterproofing




Install 36" self-adhering membrane. The membrane is turned 3" up the wall. For outside corners, make two 45° cuts (forming a V) in the membrane that turns up the wall.

5 Elevation S60 12" Field Waterproofing Membrane

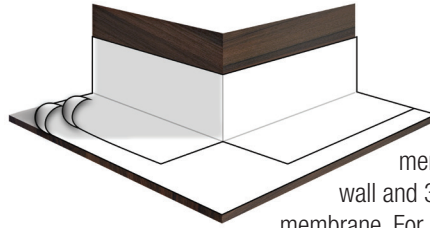


Install 12" self-adhering membrane 8"-9" vertically up the wall and 3"-4" horizontally over deck membrane. For outside corners, make a straight cut on the 3"-4" horizontal section of the membrane.

6

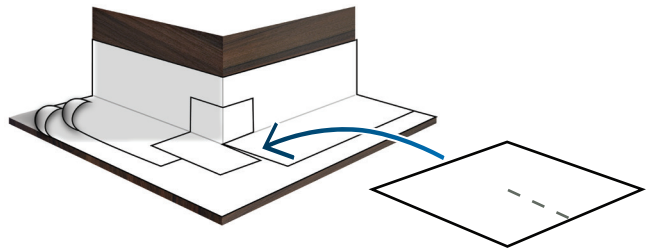


Cut two 8"x8" patches and install on the outside corner to provide reinforcement.

7

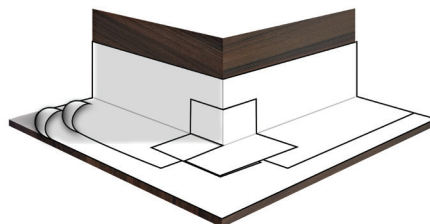

8 Elevation SM2 Lap Sealant

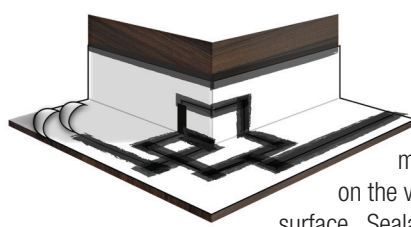

Tool sealant over all membrane edges, including those on the vertical walls and the horizontal surface. Sealant is applied to all waterproofing membrane termination points.